



 **aura**

Vacuum Cleaner
with water-based filtration & carpet washing system

U s e r
M a n u a l



CE

MaxiVac



TechnoVac



Dear Customer,

Thank you for choosing our product. We hope that Aura Wet Sweeping and Carpet Washing System, which have been manufactured in modern facilities and under high-quality standards, will provide the best solution for your needs. Please read the entire user manual thoroughly and keep it for future reference.





Contents

| | |
|---|------|
| Safety precautions | 4 |
| Technical specifications | 5 |
| Accessories | 6 |
| USAGE | 7 |
| -Sweeping | 7 |
| -Wet spill vacuuming | 8 |
| -Carpet washing with shampoo | 9-10 |
| -Blowing | 10 |
| Washing process warning and precautions | 11 |
| Cleaning and maintenance | 11 |

Safety Precautions

Please read before using your appliance!

- This device is designed only for domestic use.
- Before plugging your device in, check that the mains electricity is suitable for the voltage specified on the technical information label.
- No grounding is required as your device is fully insulated. You can safely use it in a groundless socket.
- Before operating the device, be sure to check the device or power cord for damage. If there is any damage, do not operate your device and contact your nearest Aura Authorized Service.
- Do not leave the device plugged in when it is not in use. Turn off your device before unplugging. When removing the plug from the socket, do not pull the plug by the cable.
- Your device is equipped with an automatic cable winding mechanism. Do not force the cable to push in, do not use it unnecessarily and do not let your children use it as a toy.
- Do not pull or carry the device by its power cable. Do not allow the cable to be caught by a door. Keep power cable away from sharp edges and hot surfaces.
- Power cord should be checked regularly for damages. The device should not be used with a damaged cable. If the power cord is damaged, it must be replaced by an equivalent cord or cord set available from its manufacturer or service agent. This operation must be done by an authorized service.
- Do not vacuum burning, smoking or smoldering things like cigarettes, matches or hot ashes. Never use your device to clean flammable liquids such as gasoline, alcohol, fuels, or where these substances may be found.
- Never use your device to clean the oil, soot, chimney dust, ceramic powder, lime dust, gypsum dust, or to cleaning fireplaces.
- Never use your device to clean volatile and toxic substances or near these substances.
- Always unplug your device before starting maintenance and cleaning.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not allow your device to be used by children as a toy or to be operated by children without supervision. Children should be supervised to ensure they do not play with the device.
- Do not try to repair the device after malfunctioning or any other situation you may suspect. Please contact the Authorized Service.

Technical Specifications

| Model | 114HW - MAXIVAC | 114RW - TECHNOVAC |
|---------------------------|--------------------------|--------------------------|
| Wet/Dry Sweeping | ✓ | ✓ |
| Washing Function | ✓ | ✓ |
| Motor Power (max) | 1000 Watt | 1000 Watt |
| Vacuum | 1950 mmSS | 1950 mmSS |
| Voltage / Frequency | 220 - 240 V AC, 50/60 Hz | 220 - 240 V AC, 50/60 Hz |
| Air Flow | 200m ³ /h | 200m ³ /h |
| Water Suction Rate | 1 - 1,5 L/sec. | 1 - 1,5 L/sec. |
| Fresh Water Tank Capacity | 7 L | 3,5 L |
| Dirty Water Tank Capacity | 8,5 L | 6 L |
| Weight | 12,7 kg | 10,8 kg |
| IP Code | IPX4 | IPX4 |
| Protection Class | II | II |



Accessories

Sweeping & Washing



1- Floor cleaning nozzle, 2- Elliptical brush, 3- Crevice tool, 4- Suction hose, 5- Telescopic tube, 6- Air outlet filter, 7- Sponge filter, 8- Filter cover, 9- Filter slot, 10- Blowing apparatus, 11- Suction group, 12- Big washing nozzle, 13- Hard floor rubber, 14- Mini washing nozzle, 15- Washing set spray pipe, 16- Pipe clamp, 17- Spray trigger, 18- Clean water tank, 19- Suction pipe, 20- Shampoo.

Usage

Sweeping

- Our vacuum cleaners are equipped with multipurpose accessories and engineered with economic design for dry sweeping and wet spill vacuuming.



Open head unit by releasing both securing clips.



Lift head unit from dirt collection tank.



Attach suction group.



Place the sponge filter in the direction of the arrow.



Place the filter slot in the direction of the arrow.



Tighten the filter securing lock clockwise.



Add clean water up to the level indicated.



Place the head unit and attach suction hose to inlet connector.



Insert handle into end of telescopic tube



Attach floor cleaning nozzle to telescopic tube and lock it in place.



Pull power cable and insert its plug into the main power supply.



Press on green button for power. If machine is on, the led light will be illuminated.

NOW, YOUR DEVICE IS READY FOR SWEEPING

IMPORTANT

- 1- The pump switch must NOT be used in any vacuuming mode. Use of the pump without water will lead to PUMP FAILURE. Only switch the pump on when using your device for carpet washing purpose.
- 2- It is recommended that all filters be checked and cleaned after each use.

Wet spill vacuuming

In the event of a wet spill in your home, your device can be used to remove liquids from your floor.

WARNING

Do not use your device to vacuum any hazardous liquids like flammable liquids, corrosives, acids, oil based liquids, etc...

Use the following steps convert your device from sweeping mode to wet vacuuming mode.



Lift the head unit from the dirt collection tank.



Attach suction group.



Place the sponge filter in the direction of the arrow.



Place the filter slot in the direction of the arrow.



Tighten the filter securing lock clockwise.



Make sure that the tank is empty.



Place the head unit and attach suction hose to inlet connector.



Insert the handle into end of the telescopic tube



Attach big/mini washing nozzle to telescopic tube and lock it in place.



If needed, attach the rubber to the big/mini washing nozzle by sliding tool onto the front of the head.



Pull power cable and insert its plug into the main power supply.



Press on green button for power. If machine is on, the led light will be illuminated.

WARNING

During the vacuuming, if the water level is exceed in the tank, the noise of the device will be higher. In that case, unplug your device and discharge the water from the tank.

NOW, YOUR DEVICE IS READY TO VACUUM WET SPILLS.

Carpet washing with shampoo

AURA is an exceptional carpet cleaner. Clean your carpet or furnitures to keep them free from harmful allergens, in addition to remove stubborn stains for a healthy home.

IMPORTANT

Be sure of that; surfaces to be washed must thoroughly swept first.

Use the following steps to set up your device for carpet or furniture washing.



1 Attach suction group.



2 Place the sponge filter in the direction of the arrow.



3 Place the filter slot in the direction of the arrow.



4 Tighten the filter securing lock clockwise.



5 Make sure that the tank is empty.



6 Place the head unit on the dirt collection tank.



7 Attach clean water tank to the rear of the dirt collection tank.



8 Fill the tank with tap water. *



9 Pour two caps of shampoo in to the clean water tank.



10 Insert suction pipe into the tank and attach the free end of the suction pipe to the inlet port of the head unit.



11 Place the head unit and attach suction hose to inlet connector.



12 Insert the handle into end of the telescopic tube

* DO NOT FILL THE TANK WITH HOT WATER.



Attach big/mini washing nozzle to the telescopic tube and lock it in place.



If needed, attach the rubber to the big/mini washing nozzle by sliding tool onto the front of the head.



Attach free end of washing set's tube extension to the big/mini washing nozzle. - To attach the tube extension, insert and turn it clockwise 90 degrees. - To release, turn it anticlockwise 90 degrees and remove.



Attach the washing set's tube extension to the free end of the washing set tube and lock it by turning.



Attach the spray trigger to the handle.



Secure the spraypipe to both external surfaces of the telescopic tube and suction hose by using the securing clamps.



Insert long end of the washing set's spraypipe to the checkvalve inlet.



First press power on green button. If machine is on, the led light on the switch will be illuminated. Then press pump on red button. If pump is on, the led light on the switch will be illuminated.



Press the trigger's button to begin spraying water from big/mini washing nozzle.

NOW, YOUR DEVICE IS READY FOR CARPET WASHING.

Blowing



In order to use the blowing feature, remove the cover and sponge filter on the rear air outlet duct of your device and attach the blowing apparatus (Accessories 10). Turn on the device by inserting the hose end into the blowing apparatus. The blowing feature is ready to use.

Washing process warnings and precautions

- Surfaces to be washed must thoroughly swept first.
- We strongly recommend that you use Aura shampoo in your product. You can provide Aura shampoo from authorized services.
- Other shampoos, cleaning chemicals, foaming liquid or powder detergents may damage your device.
- Never run the pump when the water tank is empty.
- If the water in the tank runs out while the pump is running, turn off the water pump immediately.
- Repeat the cleaning process a few times for very dirty carpets and upholstery.
- Before using your washed items such as carpets, sofas, etc., let them dry for about two hours.

Cleaning and maintenance



Lift the head unit from the dirt collection tank.



To drain remaining water, turn the head unit sideways as in the way it is.



Remove the filter cover by turning the lock anticlockwise and pulling outwards.



Remove the filter slot in the direction of the arrow.



Remove the sponge filter in the direction of the arrow.



Remove the suction group.

After carpet washing and wet vacuuming

- Turn off the on/off switch and unplug the device. Remove all attachment and suction-hose from the device.
- Empty the dirty water reservoir, wipe with a cloth to remove dirt, rinse thoroughly with warm water and allow to dry completely before storage.
- Remove sponge filter, rinse and allow to dry completely.
- Rinse and clean all parts and accessories thoroughly and allow to dry completely.
- To clean the suction-hose, flush clean by running hot tap water through it and allow to dry completely before using again or storage.

WARNING

Always unplug the device from the mains power. Before use start with cleaning and maintenance.

IMPORTANT

Maintenance must be performed by an authorized service technician.



İhlas Ev Aletleri

BOSB Mermeciler San. Sit. 7. Cad. No:14 / 34524 Beylikdüzü / İSTANBUL
Tel: +90 212 875 35 62 / Faks:+90 212 875 36 64
www.iea.com.tr - info@iea.com.tr